


SUTTLE

SAM-MS34 Multi-Switch Module

User Guide

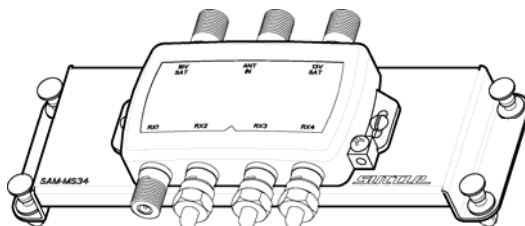

**3 x 4 Multi-Switch
40 – 2150 MHz**

DIRECTV[®] APPROVED

FOR TECHNICAL SUPPORT, PLEASE CALL
ZINWELL[®] CORPORATION (909)444-1518,910-8680

1001 East Hwy 212
Hector, MN 55342
www.suttleonline.com

Toll Free: 1-800-852-8662
Local: 1-320-848-6711
Fax: 320-848-2361

Module Installation

Mounting:

Align the mounting pins with the grid holes on the back of the enclosure. With the mounting pin plungers in the “out” position, press the unit into the grid in the desired location, secure by pushing the plungers in.

Terminate incoming/outgoing coaxial cable:

Install F male connectorized RF coaxial cables from the satellite to the “18V SAT” and “13V SAT” ports. Install F male connectorized RF coaxial cables from the “RX1” through “RX4” ports to the receiver(s). If CATV or antenna signal is used, install an F male connectorized RF coaxial cable to the “ANT IN” port. In this case a diplexer must be used on the output ports to split the satellite signal to the receiver and the antenna signal to the TV. Use the port identification label to record the output locations.

