


SUTTLE

SAM-RFBA11

Multimedia Bi-directional Drop Amplifier

User Guide

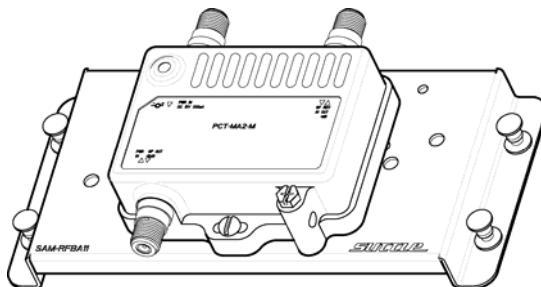

1001 East Hwy 212
Hector, MN 55342
www.suttleonline.com

Toll Free: 1-800-852-8662
Local: 1-320-848-6711
Fax: 320-848-2361


Module Installation

Mounting:

Align the mounting pins with the grid holes on the back of the enclosure. With the mounting pin plungers in the “out” position, press the unit into the grid in the desired location, secure by pushing the plungers in.

Terminate incoming/outgoing coaxial cable:

Install an F-male connectorized RF coaxial cable from CATV or antenna to the “RF IN” port. Install an F-male connectorized RF coaxial cable to the “RF OUT” port.

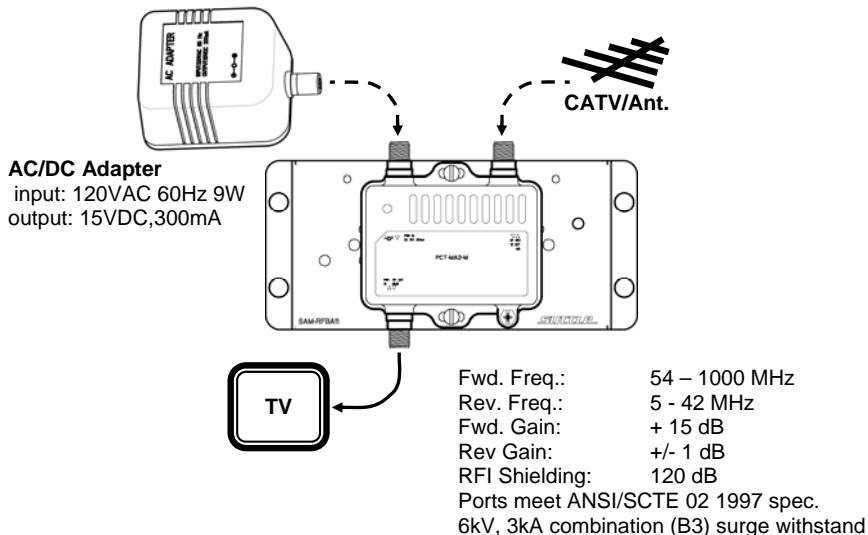

Power

Verify the AC voltage rating of the power source conforms to the AC/DC adapter. Install an F-male connectorized RF coaxial cable from the AC/DC adapter into the “PWR IN” port. Plug the AC/DC adapter into the AC power source.